SynchroTeq[®] Plus Circuit Breaker Controlled Switching

Smart Coding & Options Selection 2024-07-31



	Vizimax Reference Number			
er option code to complete the part number pose among the following options	STP030000			
nchroTeq Plus - base unit des	scription(Ref:STP030000)			
	SynchroTeq Plus base unit includes: 12x digital inputs + 6x digital CB control outputs (3x Trip Coils + 3x Close coils) + 11x digital relay outputs + 3x PT inputs (100/√3 up to 120V) + 3x CT inputs (1A or 5A) + 5x DC analog measurement inputs (4-20mA) with compensation and/or alarm functions + 1x auxiliary analog input (configurable 4-20mA or "PT rated" AC voltage) + 2x 100Base-T Ethernet ports +1x RS-485 serial port and native IEC61850 server MMS Ed.2 with XCBR control model.			
SynchroTeq Plus base unit c	onfiguration(Ref:STP030000)			
a - Hardware version & Mounting The "Standalone" version comes wi	th a protection cover			
19" Rack (to be installed in protection		RM		
Standalone (to be installed in circuit	breaker cabinet)	SA		
b - Language	e face plate, front display and software user interfaces			
I he selected language applies to th				_
French			FR	
			ΕN	
French				
French English			ΕN	

5 Amps RMS nominal current (See Note 1)

Note 1:5 Amps recommended for applications with inrush currents, no matter whether the CT is 1A or 5A.

Smart coding example

SynchroTeq Plus Unit, rackmount, English version, 125Vdc, 5A CT

STP030000 RM EN 3 5

5

2 - SynchroTeg Plus Communication and Synchronization options

All the options below are not included in the price of SynchroTeg Plus unit (STP030000). Additional costs may apply, please contact your sales rep for more information

2.1 SynchroTeg Plus options - additional communication ports and synchronization module - See Note 2

Standard: Two Ethernet 100BASE-T / RJ45 ports + one RS485 serial port + one USB (type B) port

Description		Reference
One (1) Ethernet 100BASE-LX10 port / Single Mode F.O with LC connector	(Slot T or U)	RWC0P0000
One (1) Ethernet 100BASE-FX port / Multi Mode F.O with dual ST connector	(Slot T or U)	RWC0D0000
One (1) Ethernet 100BASE-T port / RJ45	(Slot T or U)	RWC0C0000
One (1) IRIG-B synchronization module	(Slot U exclusively)	RWC0Y0000

Note 2 : Up to two (2) additional ports may be ordered.

All Ethernet ports (standard and additional ports) offer the same full functionalities.

2.2 - SynchroTeq Communication module - Additional communication ports and protocols - See Note 3		
	Description	
	SynchroTeq Communication module with Two (2) isolated Ethernet 100BASE-T ports + one (1) 100BASE-FX Ethernet Fiber Optic Multimode port + two (2) isolated Serial RS485/RS232 ports + one (1) Digital Output and supported protocols : DNP3.0 Slave, Modbus Slave, IEC61850 Server Ed.1 - Integrated XCBR LN.	

Note 3 : This module cannot be added when the SynchroTeg RS-485 serial port is used for another function (like RFC sharing between two SynchroTeg units or TRAS system).

2.3 - Vizimax Unified Communication Services software		
Description	Reference	Select your option
Vizimax Unified Communication Services: For automatic data transfer to a centralized site of events and waveforms. Base for ten (10) SynchroTeq units, expandable by pack of 10 or 25 licences.	RWS055000	

3 - SynchroTeg Plus options - Function boards

All the options below are not included in the price of SynchroTeg Plus unit (STP030000). Additional costs may apply, please contact your sales rep for more information

3.1 Bypass module (STP030302) control option

Standard: no bypass module	
Description : SHL-1 - DCO type - Bypass module (Installed in G-H-I slots)	Reference
Bypass module configured in 'automatic mode' (factory default configuration) - See Note 4	STP030302 (std)
Bypass module configured in 'Timed mode' - See Note 4	STP030302 (temp)
Bypass module configured in 'Memorized automatic mode' - See Note 4	STP030302 (mem)

Bypass module is an SHL "Standalone Hardwired Logic" module and is independent from the main unit.

Note 4 : By default, the bypass module is set to "Automatic Mode"; if you wish to use another mode, please select one of the

available configurations. Please refer to the Bypass manual (STP030302-UG) for more details.

3.2 C/B coil control outputs (SBO - Select Before Operate) module option

Standard: standard SPSBO module with 'source' configuration shared by all 6 outputs (Installed in AA-BB slots).

Description :	Reference	Select your option
SPSBO-F module with 6 floating coil control outputs - See Note 5 (The STP030304 option is free of charge and replaces the standard SPSBO board in the AA-BB slots).	STP030304	
Dual Batteries SPSBO module - See Note 6 (The STP030305 option is free of charge and replaces the standard SPSBO board in the AA-BB slots).	STP030305	

Note 5: This option provides 6 potential free isolated solid state outputs. These outputs are designed to 'source' or 'sink' the current from the C/B coils connected to the positive bus, or to drive a C/B electronic controller. Please refer to the STP030304-UG manual for more details.

Note 6 : This option allows to separate CLOSE and OPEN coil power supply circuits. The C/B (3)CLOSE and (3)OPEN outputs are controlled in 'source' configuration. Please refer to the STP030305-UG manual for more details.

3.3 Additional three phase voltage measurement module with residual flux calculation (STP03010x) option Standard: no additional voltage measurement module

Description : Additional voltage measurement module (Installed in J-K-L slots)	Reference		Select your option
<u>SPFLUX module for bushing sensors</u> : including three (3) additional bushing sensors inputs + three (3) 4-20 mA sensor inputs + residual flux calculation algorithm. (This option requires an active junction box: See Note 7)	STP030101		
SPFLUX module for magnetic measurement PT: including three (3) additional PT inputs + three (3) 4-20 mA sensor inputs + residual flux calculation algorithm.	STP030103		
Note 7 : if you select this option, you have to select items in section 4 - SynchroTeq Plus - Bushing sensors, a	ctive junction box	-	



Select your option


Select your option

Quantity

4 - SynchroTeq Plus - Bushing sensors, active junction box and connections

This section must be filled ONLY if you selected the STP030101 option.

All the options below are not included in the price of SynchroTeq Plus unit (STP030000). Additional costs may apply, please contact your sales rep for more information

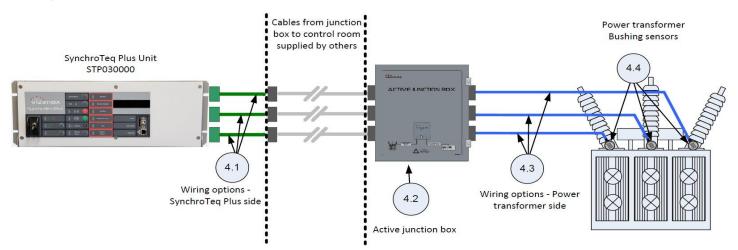

4.1 - Wiring Options - SynchroTeq Plus side

All cables are equipped and terminated for an immediate connexion to the main unit - Other side: free wires		
Description	Reference	Select your option
Three (3) cables - SynchroTeq Plus to terminal block - 3m/10 feet each	STP030170	
Three (3) cables - SynchroTeq Plus to terminal block - 5m/15 feet each	STP030180	

4.2 - Junction box

Active junction box includes free wires connectors on Synchrolled Plus side and power transformer side		_	
Description	Reference	[Quantity
Active junction box with 3-phase connections	STP030200	ſ	
Active junction box with 1-phase connection (for distant single-phase transformers)	STP030201		

4.3 - Wiring Options - Power transformer side - See Note 8

Sensor cable, with pre-assembled connector on sensor side, free wires on the junction box side

Description	Reference
One (1) cable - junction box to bushing sensor - 15m/50 feet	STP030315
One (1) cable - junction box to bushing sensor - 30m/100 feet	STP030330
One (1) cable - junction box to bushing sensor - 50m/164 feet (for very tall or distant EHV transformers)	STP030350

Note 8: One (1) cable per phase has to be ordered. For other cable length, please inquire

4.4 - Bushing sensors - Technical data - Mechanical fitting - See Note 9

Set of three (3) bushing sensors - one per phase - to be installed in voltage test tap on the power transform	er or shunt reactor bushir	ng.	_
Description	Reference		Select your option
Three (3) bushing sensors for voltage measurement and residual flux calculation - See Note 9	STP030400		
Note 0 - Very several fill and the ID relation and an effective line presting. One determines the several time of break	to a second second		

Note 9: You must fill out the 'Bushing sensor configuration' in section 6 to determine the exact type of bushing sensors.

5 - Transformers Re-energization Advisory System (TRAS)

Transformers Re-energization Advisory System allows parallel re-energization of up to three power transformers. Please contact Vizimax's technical team for project feasibility

Thease contact vizimax's technical team for project reasibility		
Description	Reference	Select your option
Transformers Re-energization Advisory System available for the re-energization of two or three power	BDL000004	
transformers in parallel operated by one circuit breaker - See Note 10		

Note 10: Project feasibility must be confirmed by Vizimax's technical team

aaanaay	

Quantity


6 - Bushing sensor configuration

This section must be filled ONLY if you selected 'Bushing sensors' in section 4.4

*The following information (6.1 to 6.4) is MANDATORY. If not available, please fill section 6.5 'Additional data' as much as possible.

6.1 Bushing sensors - Technical data - Electric environment*	
Nominal line voltage (L-L)	kV
Maximum voltage measurement range before clipping (limited by surge arrestor); <u>defau</u> Please fill the box if you wish another range value.	ult value is 2 P.U. PU
6.2 - C1: Bushing main capacitance to test tap*	
These are generally available on the bushing's nameplate and/or test report. If not, typic	
C1 bushing capacitance value (This value applies for all 3 phases)	pF
6.3 - C2 : Bushing test tap capacitance to ground*	i al values forma deterio e te ano auffrica t
These are generally available on the bushing's nameplate and/or test report. If not, typic	
C2 bushing capacitance value (This value applies for all 3 phases)	pF
6.4 Test Tap*	
Is the test tap "IEEE/ANSI Type A"?	Yes/N
Note: For ABB/Hitachi GOE answer Yes.	
Else, provide the dimensions of the tap (diameter, depth and thread) along with a	a photo or a cross-sectional drawing of the tap
Diameter of tap (thread level) - inch or mm (specify)	
Thread pattern - inch or mm (specify)	
Depth of test tap - inch or mm (specify)	

Provide a cross-sectional drawing of the tap similar to:

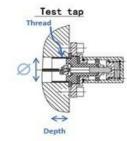

6.5 Additional data

Please fill in this section if above mandatory data is not available. Provide as much as possible:

Name of Bushing manufacturer	
Bushing model and part number	
Bushing serial number	
Place and date of manufacture	
Technical contact at bushing manufacturer (name, email, phone number)	

Customer is required to verify upon their receipt that the sensors actually fit, to not delay the commissioning of the system in the unlikely case they do not fit and a model change is required.

For Vizimax use only